

252.62 mm

50-2790B

Universal Sway Bar Link Cut Off Template

- 1- Measure centre to centre length of the original ball link using a measuring tape.
- 2- Place the rod on the template below (not to be used for centre to centre length measurement).
- 3- Using a suitable pen mark the cut to length.


We have already worked out the formula for correct length for you

NOTE: Fit the nut to the rod before cutting to help with cleaning cut threads

- 4- Fit nut and ball end making sure that the thread is as far into the ball end as possible and lock together in the desired angle.

The use of thread locking liquid is advised i.e. LOCTITE.

Ensure there is free play in ball ends when unit is fitted into position on the vehicle.

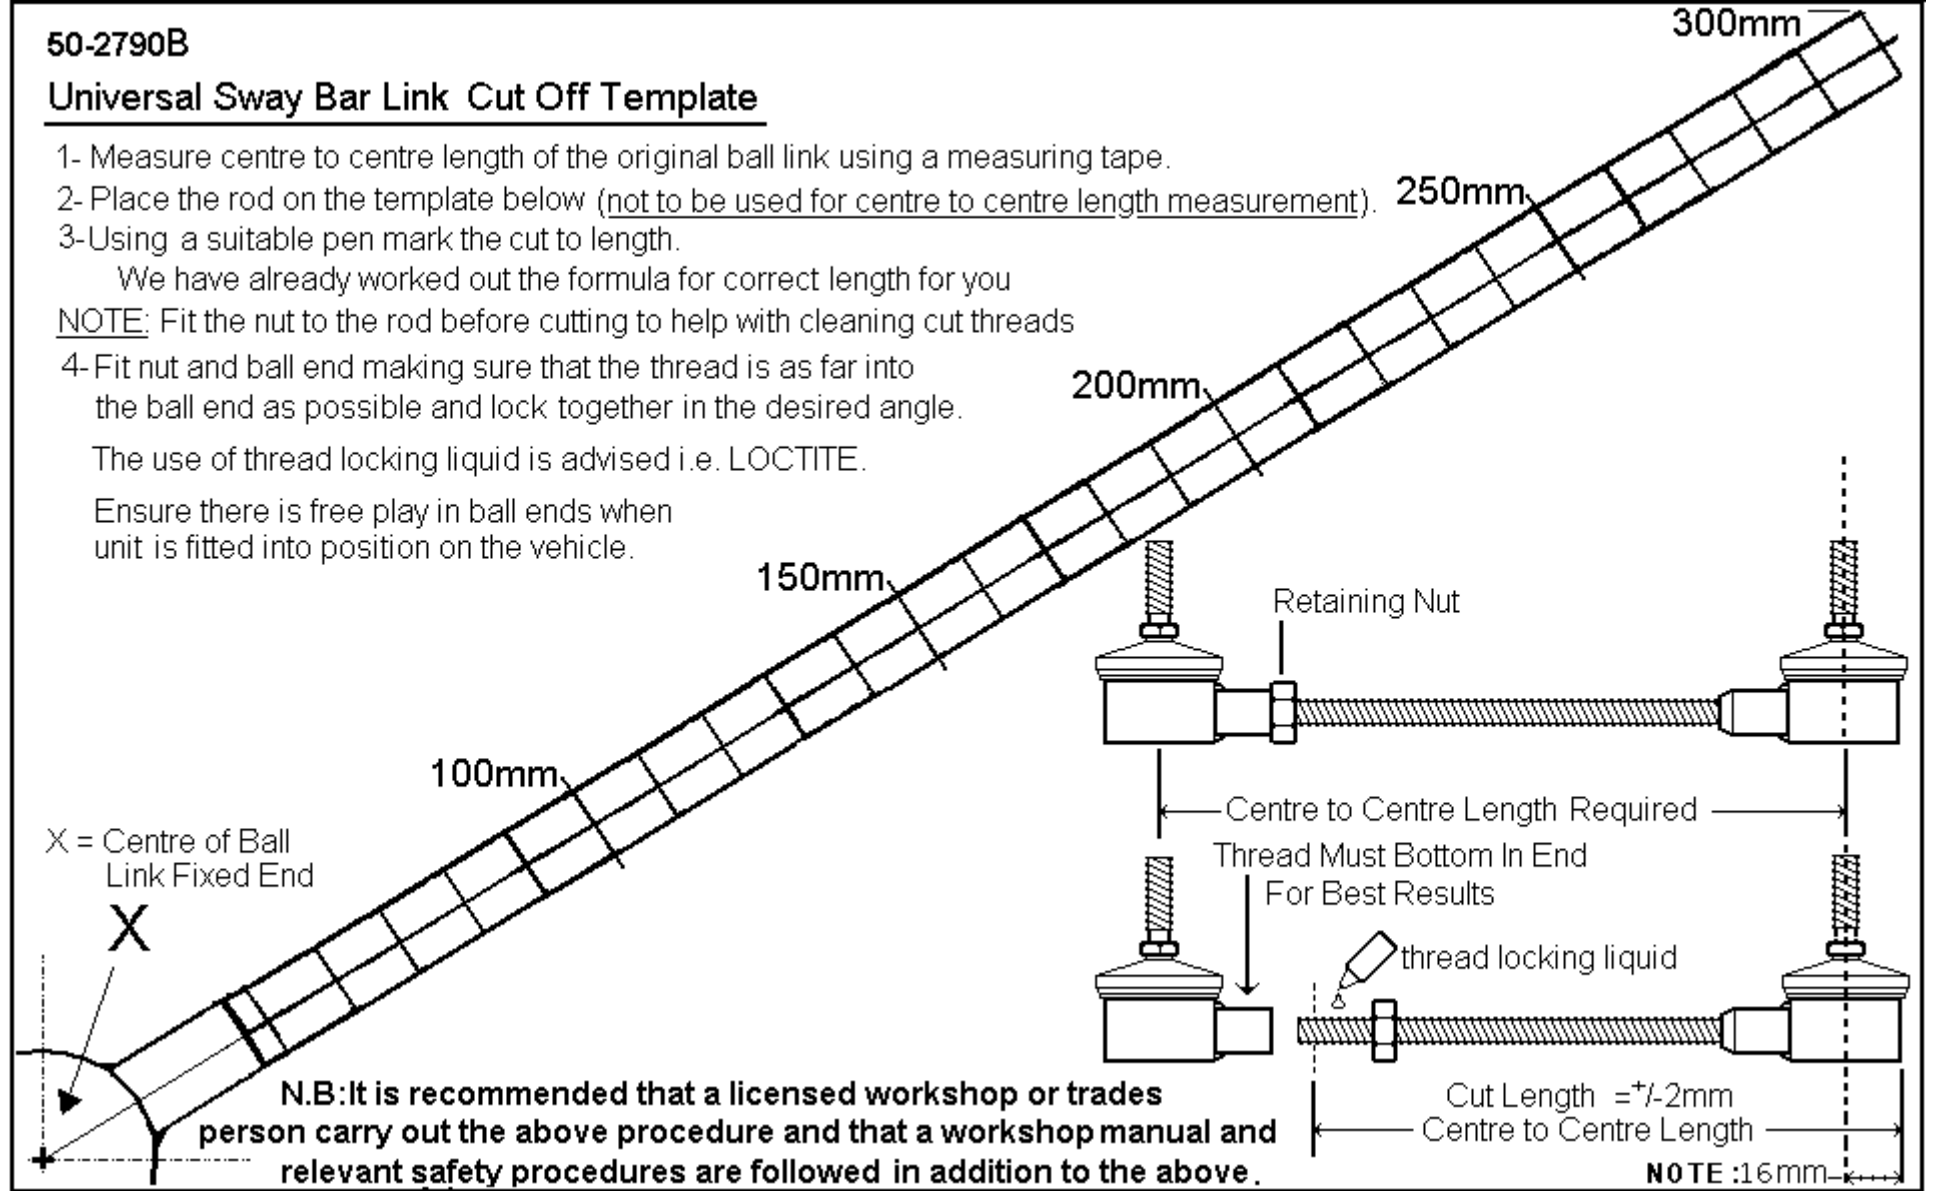

157.08 mm

N.B: It is recommended that a licensed workshop or trades person carry out the above procedure and that a workshop manual and relevant safety procedures are followed in addition to the above.

NOTE: 16mm